
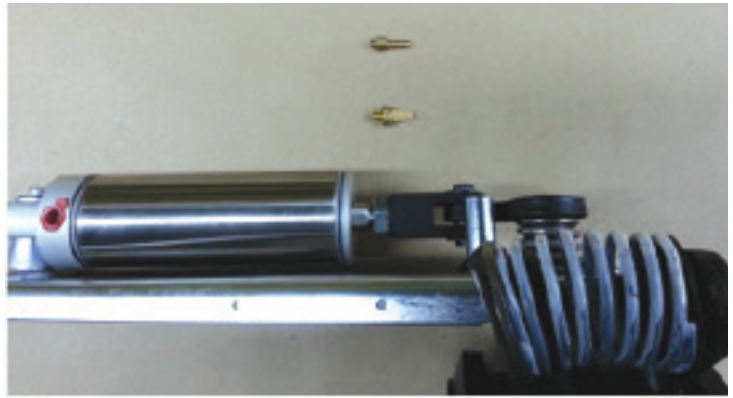


REMOTE BREATHER INSTALLATION INSTRUCTIONS FOR INLINE MOUNTED EXHAUST BRAKES


The exhaust brake in your kit will be supplied with a breather installed in the cylinder vent port. This needs to be replaced with a barbed fitting to allow a remote breather to be installed.

Step 1 | Remove the cylinder vent port breather.

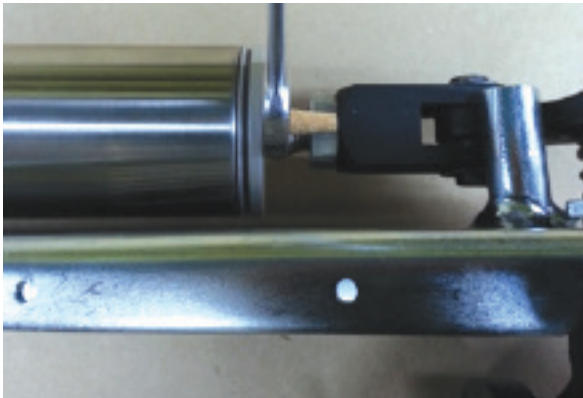

Step 2 | Install the barbed fitting in to the cylinder vent port and torque to 15 in-lbs. Over torquing WILL result in breaking the fitting in the threads.

Step 3 | Push the blue nylon breather hose onto the barbed fitting, making sure it is fully seated as shown in the photo. This can be made easier by warming up the hose end in a cup of hot water.

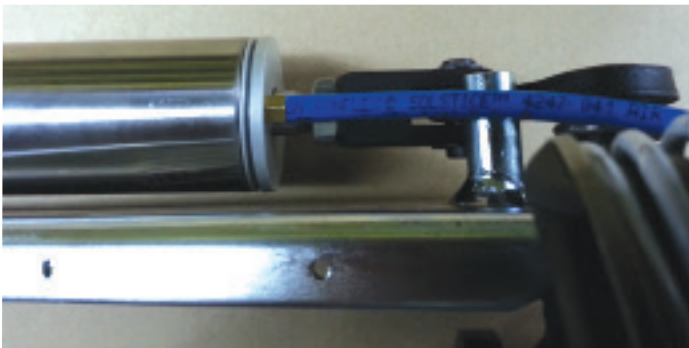

Step 4 | Route the remote breather end of the hose to a clean dry area such as the engine compartment. Secure the hose using the supplied tie straps, away from heat sources and moving parts.